



Installation Instructions

Follow these easy steps to assure maximum eff ectiveness: Helpful hint: It is easier to hang the unit prior to attaching the hose assembly.


Parts List:

- (1) Drip Diverter with attached clear drain
- (1) Blue Hose Fitting




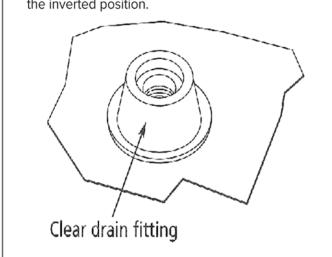


2. From the bottom side of the unit, insert a finger into the center of the clear drain fitting. Pull outward on the inside of the fitting to reveal the external threads.

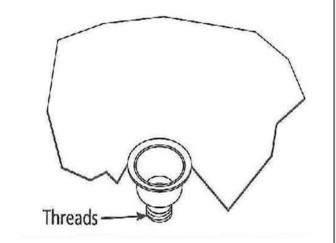

3. Attach a 3/4" drainage hose (not included) to

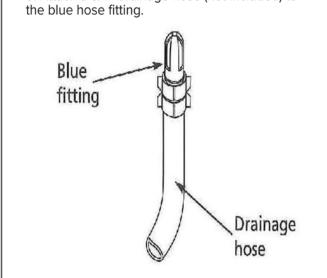

4. Attach the hose assembly (blue fitting and 3/4" drainage hose) to the clear drain fitting on the unit.

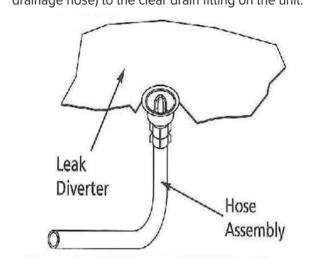

Drain-Net Technologies • Toll Free 1-844-564-9216 • Phone: 908-236-0277 • Fax: 908-236-0278 Website: www.drain-tech.com • Email: sales@drain-net.com